# IQSHARE WP40

## WIRELESS PRESENTATION SYSTEM

**Quick Guide**

www.iqboard.com.au
enquiries@iqboard.com.au

---

# Attentions

● When using WP40 in an enclosed environment, please ensure that the enclosed space can receive WiFi signals.
● When using WP40 in an open environment, make sure the indicator light area at the front of WP40 is not obstructed.
● Please use the provided power adapter.
● If the length of the connected HDMI and USB cables exceeds 3 meters, please use cables with signal boosters.
● For WP40 BYOM feature, it is recommended to use IQ-recommended Camera and Speakerphone.
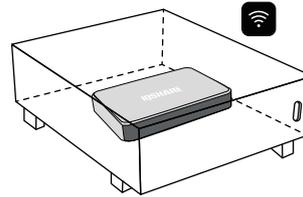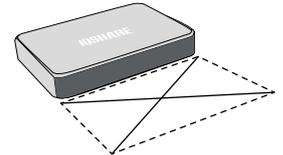
**Enclosed Environment**          **Open Environment**

1

---

# Packing Lists

**1. IQShare Box**

**2. IQShare Button(Optional)**
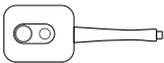
**3. Remote Control**

Receiver

（Insert receiver to USB port of IQShare WP40 before using the remote control.）

**4. HDMI Cable**

**5. Power Adapter**

**6. Certificate**

**7. Warranty Card**

Warranty Policy
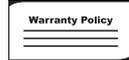
**8. User Manual**

User manual

2

---

# Product Review

## Dimensions
(Unit: mm)

145    104    23    78    63    175    17
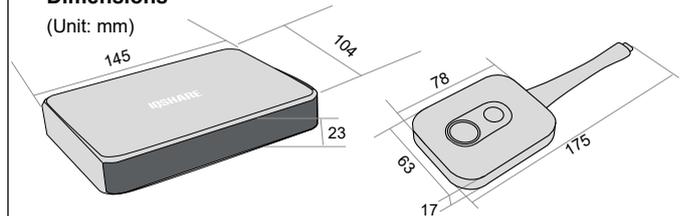
IQShare WP40: 145mm*104mm*23mm

IQShare Button(Optional):
63mm*78mm*17mm(without wire)
63mm*175mm*17mm(with wire)

## Ports Illustration

DCIN   USB   USB   HDMI   LAN   AUDIO
⑦ ⑥      ⑤     ④      ③      ②      ①
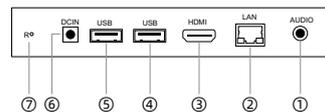
① Audio out（3.5mm）
② LAN
③ Hdmi out
④ USB 2.0
⑤ USB 2.0
⑥ DC in（5V 2A）
⑦ Reset

3

---

# Connection

## Connect with touch screen

Power cable

IQTOUCH

DCIN   USB   USB   HDMI   LAN   AUDIO

HDMI cable
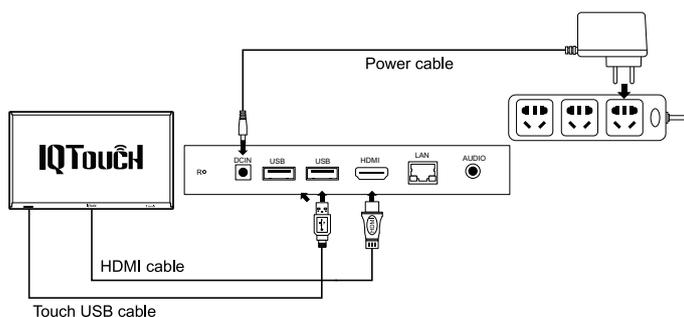
Touch USB cable

1. Power on IQShare WP40.
2. Connect IQShare WP40 and touch screen with HDMI cable and touch USB cable.

4

---

## Connect with projector

Power cable

DCIN   USB   USB   HDMI   LAN   AUDIO
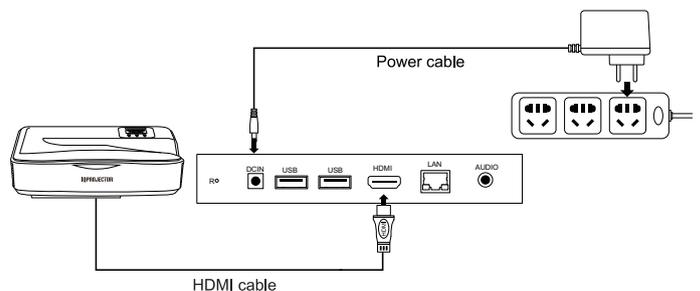
HDMI cable

1. Power on IQShare WP40.
2. Connect IQShare WP40 and projector with HDMI cable.
3. Connect IQShare WP40 with external display device through HDMI cable.

5

# Enable the device

1.The indicator light will turn blue when power on. The main interface of IQShare WP40 will show on the display screen.



2. The IQShare Button should be paired with the IQShare WP40 for the first time connection. Plug the IQShare Button into the USB port of IQShare WP40. It will pair automatically after pressing the button on the IQShare Button. Pull out IQShare Button after successful pairing
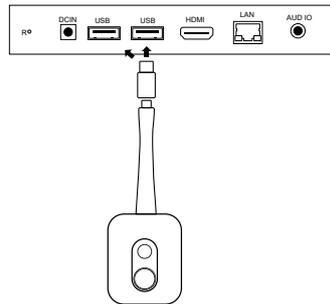
3. Plug IQShare Button to the HDMI/USB/Type C port of external PC (windows or mac), press the share button to present screen.
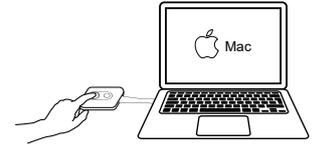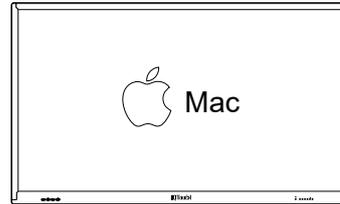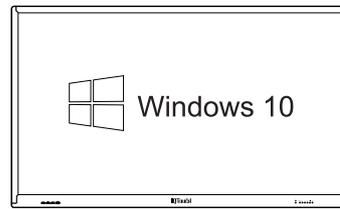
# Mobile Casting

## IOS Casting
1. Make sure the iPhone/iPad and IQShare WP40 are connected to the same network, or use the hotpot of the IQShare WP40.
2. Select screen mirroring (Airplay protocol), select the WP40 device and share the iPhone/iPad screen to the display device
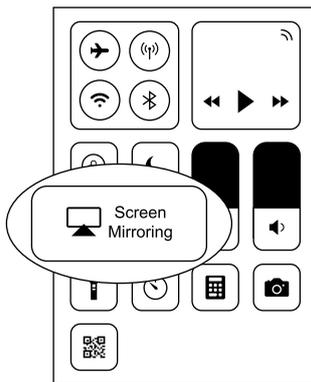


## Android Casting
1. Make sure android phone/pad is under the same network with IQShare WP40 or use the hotspot of IQShare WP40.
2. Scan the QR code to download the app.
3. Run app，select the WP40 device and share the phone/pad screen to the display device.



EShare
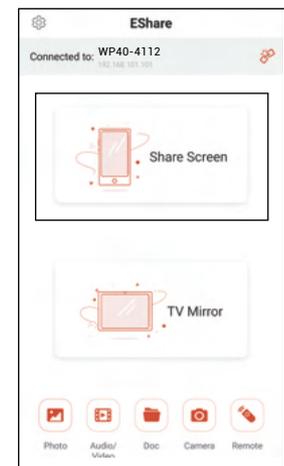
# Trouble Shooting

| NO. | Problems | Solutions |
|---|---|---|
| 1 | Connecting Error, Please Check! | Re-plug the IQShare Button or try to reboot of IQShare WP40. The IQShare Button needs to be re-paired after resetting or changing the hotspot name and password. |
| 2 | The IQShare WP40 can automatically upgrade when connected to the Internet. | Plug IQShare Button to the HDMI and USB port of IQShare WP40, click upgrade if pop-up window appears. Do not unplug the IQShare Button during the process. And need to re-paired after upgrade. |
| 3 | Android mobile can't search the hotspot. | Please check if your phone supports 5G network. If no, set as the 2.4G network of IQShare WP40. (5G is recommend) |
| 4 | Eshare app in Android mobile can't find device. | Please check if the mobile and IQShare WP40 is connected to the same network segment or not. |
| 5 | Android mobile can't cast audio. | Make sure open the Bluetooth and select target device. |
| 6 | IOS can't cast screen. | Air play screen casting only supports 9.0 above system. |
| 7 | Fail to adjust the resolution. | Please check the cable you connected is HDMI cable. |

# Specifications

| Model | WP40 |
|---|---|
| Video Outputs | HDMI 1.4, comply with HDCP |
| Frame Rate | Up to 60 fps depending on environment (UHD) |
| Input&Output Resolution | Max 3840*2160P(4K) |
| Simultaneous Connections(Buttons) | 8 pcs |
| Max. Display Windows | 4 pcs |
| Audio | Stereo, Radio quality 16bits 48KHz |
| Wireless Transmission Band | 2.4 GHz & 5 GHz (dual band WIFI) |
| Wireless Transmission Protocol | IEEE 802.11 a/g/n/ac |
| Wireless Bandwidth | Up to 800Mb |
| Support OS | Windows7/8/10, Mac OS, Chrome OS, Android, Linux, IOS 8.0 and above |
| Interface | HDMI out 1.4*1, USB*2, RJ45*1, Audio out (3.5mm)*1, DC in *1 |